

"TSI" FIT TEST MACHINE

PLUG IN COMPRESSOR (BLUE BOX) to make particulates
< 1 salt Tablet (+) BOTTLED WATER & Stir > Allow to
brew for 30 minutes.....

- OR -

LIGHT A YANKEE CANDLE to make particulates....

- ▶ PLUG IN MACHINE
- ▶ INSTALL ALCOHOL WICK
- ▶ CONNECT HOSES = Blue to Blue / white to Silver
- ▶ TURN MACHINE ON
- ▶ PLUG IN FLASH STICK
- ▶ DAILY CHECK ✓ AVAILABLE DATA BASES
- ▶ LOAD INFORMATION REQ'D. (DATA BASE)
✓ YOUR CHOICE ✓ LOAD ✓ EXIT
- ▶ EXIT
- ▶ TEST THE AIR
- ▶ INSTALL HEPA FILTER INTO END of WHITE HOSE
✓ START → Pg. 2

PG. 2

- ▶ DAILY TEST : TEST PASSED
- ▶ EXIT (REMOVE HEPA FILTER)
- ▶ ASSEMBLE APPROPRIATE MASK FILTER
- ▶ FIT TEST
- ▶ SCROLL TO DESIRED MEMBER FOR TESTING
- ▶ NEXT
- ▶ CORRECT SIZE OF MASK & TYPE OF MASK AV2000
AV3000 SEL
L
(TO CHANGE MASK SIZE or MAKE CORRECTIONS ✓ NEXT)
- ▶ ENTER OPERATOR ie: (Jelliff)
- ▶ ATTACH WHITE HOSE TO MASK FILTER
- ▶ GRAB "BLUE" LINE & DRAG TO BOTTOM of SCREEN
(!! CAREFULLY !!)
- ▶ NEXT
- ▶ EXPLAIN: PROPER BREATHING; CAREFUL LEFT & RIGHT;
CAREFUL UP & DOWN; GRIMACE NOT INCLUDED IN
TEST.....
✓ START
- ▶ NEXT
KEEP EYE ON PARTICULATES

→ PG. 3

- ▶ AFTER MEMBER COMPLETES TEST THE MACHINE WILL SELF PURGE ---- WHEN COMPLETE, HAVE MEMBER REMOVE MASK ---- THEN SELECT NEW TEST or QUIT ----
- ▶ TURN OFF MACHINE
- ▶ BREAK EVERYTHING DOWN & REMOVE ALCOHOL WICK*

MEMBER CAN NOT FAIL MORE THAN TWO FUNCTIONS ---- THEY WILL NOT PASS ----

ONLY ALLOWED THREE (3) TRY'S

→ PG. 4


FLASH STICK TO COMPUTER

▶ INSERT FLASHSTICK INTO COMPUTER TOWER

▶ vv FIT PRO

▶ OK / EXIT

▶ TOP TOOL BAR > "DATA BASE"
 > FLASHDRIVE EXCHANGE
 > BROWSE > SELECT

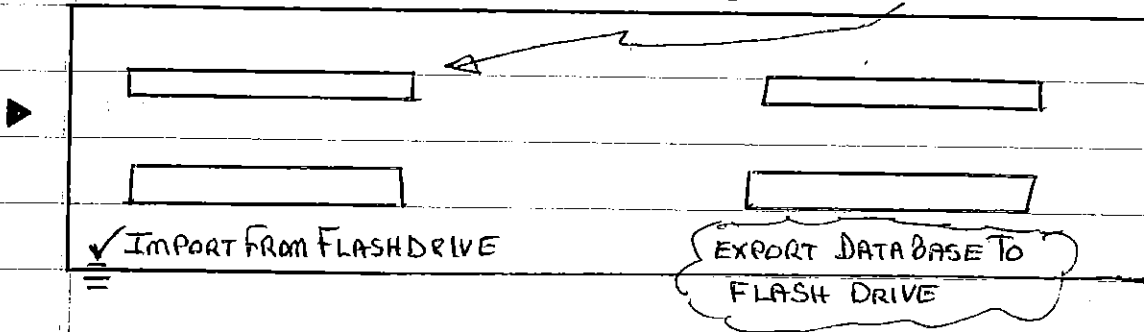

▶ OK

▶ EXIT / CLOSE

▶ "REPORT" (TOOL BAR) > SELECT REPORT > FIT TEST REPORT > VIEW REPORT
 > PRINT

FIRST ON SCREEN IS LAST TEST... USE ARROW ON TOP TO MOVE THROUGH ENTIRE GROUP TESTED

▶ EXIT / REMOVE FLASH STICK